## SPECIFICATION

## FOR

## SWITCHING POWER SUPPLY

## M/N: MPM-S052

Revision H	istory				
Version	Date	Change Items			
Rev. 01	Dec.20. 2017	Established.			
Rev. 02	Sep.17. 2018	Added metal plate description.			
Rev. 03	May.19. 2022	Changed Safety Approved.			



## 30W Medical AC / DC





#### FEATURES

- ✓ 35W air cooling/30W convection-cooled @ 50°C ambient.
- ✓ Wide operating temperature -20~80°C.
- $\checkmark$  Compact size 2" x 3" with low profile 1".
- ✓ High efficiency up to 82%.
- ✓ No-load power consumption < 0.3W.</p>
- Medical standard IEC, EN, UL 60601-1 approved, type BF rated patient contact leakage current.
- ✓ Meets EMI CISPR 11 / FCC Part 18 class B.

Mod		0 E	2.41	000
	Iels.	<b>O</b> 2 <b>D</b>	C C L L	105

l i i i i i i i i i i i i i i i i i i i					
Model Number	Wattage (Rated / Max)	Output Voltage	Min. Current	Rated Current	Max. Current
MPM-S052	30 W / 35 W	+5 V	0 A	6 A	7 A

Note:

1. Total Output Power: Rated 30W convection cooled, above 31~35W with 13.6 CFM forced air-cooling at 50°C environment temperature. Please see detail performance curves as below.

Summary						
Characteristic	Minimum	Typical	Maximum	Units	Notes & Conditions	
Input Range	85	115 / 230	264	VAC	Universal input range.	
Input Frequency	47	50 / 60	63	Hz	AC input.	
Efficiency		82		%	At input 230VAC, rated load, 1.0 hr. warm up.	
Operation Temperature	-20		+80	°C	Derate from 50°C, become 50% load at 80°C.	
Weight		103.5		g		
Dimensions	76.2 (L) x 50.8	76.2 (L) x 50.8 (W) x 25.6 (H) mm, Tolerance +/- 0.5mm.				
EMC		EN 55011, EN 60601-1-2, EN 61000-3-2, EN 61000-3-3, IEC 61000-4-2, IEC 61000-4-3, IEC 61000-4-4, IEC 61000-4-5, IEC 61000-4-6, IEC 61000-4-8, IEC 61000-4-11				
Safety Approvals	IEC 60601-1,	EN 60601-1, AN	SI/AAMI ES606	01-1, CAN/CS	A-C22. 2 No. 60601-1	



## 30W Medical AC / DC

Input					
Characteristic	Minimum	Typical	Maximum	Units	Notes & Conditions
Input Voltage	85	115 / 230	264	VAC	Universal input range.
Input Frequency	47	50 / 60	63	Hz	AC input.
Input Current			1 / 0.5	А	Nominal AC Input Voltage (115VAC/230VAC), rated load.
Inrush Current			30 / 60	А	Nominal AC Input Voltage (115VAC/230VAC), one cycle at 25°C cold start.
Leakage Current		100/300		$\mu A$	Normal Condition / Single Fault Condition.
No-load power consumption		0.3		W	Nominal AC Input Voltage (115VAC/230VAC).
Input Protection	Dual non-user	Dual non-user serviceable internally located AC input line fuse. Fuse : 2A / 250VAC * 2pcs			

Output					
Characteristic	Minimum	Typical	Maximum	Units	Notes & Conditions
Output Voltage		5		VDC	
Initial Set Accuracy		±3		%	Initial setting accuracy is adjusted at input 115VAC and output at 60% rated load.
Minimum Load		0		А	
Start Up Delay		3 / 1.2		Sec.	Time required for initial output voltage stabilization Nominal AC Input Voltage (115VAC/230VAC), rated load at 25°C.
Hold Up Time		16 / 80		mS	Nominal AC Input Voltage (115VAC/230VAC), rated load.
Line Regulation		±0.5		%	Less than ±1% at rated load with ±10% changing in input voltage.
Load Regulation		±1		%	Measured from 60% to 100% rated load and from 60% to 20% rated load (60% $\pm$ 40% rated load).
Ripple & Noise		50		mV	Measured at rated load by a 20MHz bandwidth limited oscilloscope and each output is connected with a $10\mu$ F Electrolytic Capacitor and a $0.1\mu$ F Ceramic Capacitor.
Overvoltage Protection			upply fails to cont ing external circu		build-in over voltage protection circuit will shut down
Overload Protection	Auto recovery.				
Short Circuit Protection	Fully protected	Fully protected against output overload and short circuit. Automatic recovery upon of overload condition.			



## 30W Medical AC / DC

General Characteristic Minimum Maximum Units Notes & Conditions Typical Efficiency 82 % At input 230VAC, rated load, 1.0 hr. warm up. IP to OP 4000 2 x MOPP Isolation VAC MTBF 380,000 MIL-HDBK-217F at 25°C hrs.

Environmental					
Characteristic	Minimum	Typical	Maximum	Units	Notes & Conditions
Low temperature start up	-20			°C	Some specification parameters maybe exceeded until after 20 minutes warm up period. (Note 1)
Operating Temperature	-20		+80	°C	Derate from 50°C, become 50% load at 80°C.
Storage Temperature	-40		+85	°C	
Relative Humidity	5		95	%RH	Non-condensing.
Cooling	13.6			CFM	Forced-cooled > 30W
Operating Altitude		3000		m	
Vibration	0.26		6.09	G	Frequency Type: Sweep Frequency Frequency Range: 10~55 Hz Displacement: 1.0mm Sweep Rate: 60 minute / cycle Number of cycle: 1 cycle / axis Direction: X ,Y and Z axis


Note:


1. To start up at low temperature, when the V<sub>IP</sub> <115VAC, please set the rated load @ 10% for maximum; when 115VAC< V<sub>IP</sub> <230VAC, please set the rated load @ 30% for maximum; when V<sub>IP</sub> ≥ 230VAC, there will be no specific limitation on rated load setting.



# 30W Medical AC / DC

#### Derating curve

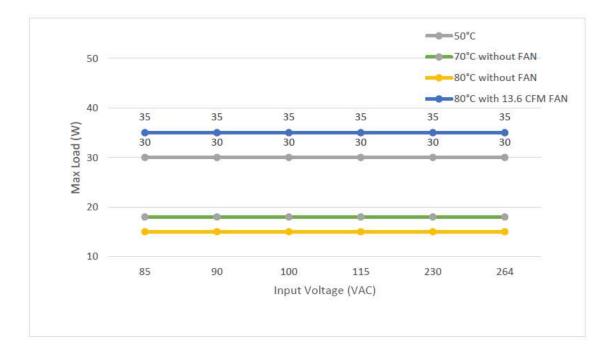

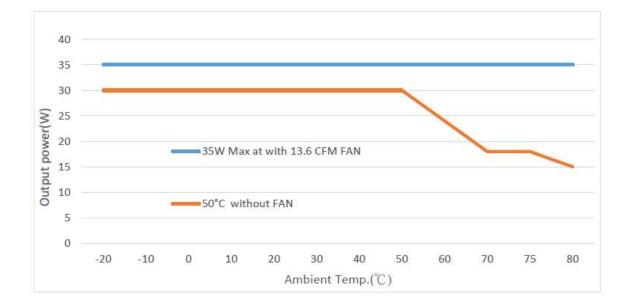



#### **EMC: Emissions**

Phenomenon	Standard	Class	Notes & Conditions
Conducted	EN 55011 / CISPR 11 & FCC Part 18	В	1. Pass without enclosure.
Radiated	EN 55011 / CISPR 11 & FCC Part 18	В	2. Pass with or without a metal plate below the power supply.
Harmonic Current	EN 61000-3-2	A	
Voltage Flicker	EN 61000-3-3		

Note:

1. Above specification is applied with output equal or below 30W. For higher output power, please re-confirm with us.

2. Above specification is based on the test conditions of EN 55011 / CISPR 11 & FCC Part 18. If there is any question when the power supply is applied to the system, please contact us for assistance.

3. Pass EMI with or without a metal plate below the power supply. If you want to use a metal plate under this power, the distance in between accessible metal part needs to add at least 4mm of 1xMOPP to meet Class II.

EMC: Immunity			
Phenomenon	Standard	Criteria	Notes & Conditions
ESD	IEC 61000-4-2	А	±15KV air discharge, ±8KV contact discharge
Radiated	IEC 61000-4-3	А	10V/m
EFT	IEC 61000-4-4	А	±2KV L-NI, 100KHz
Surges	IEC 61000-4-5	А	L-N:±1KV
Conducted	IEC 61000-4-6	А	10V
Power Magnetic	IEC 61000-4-8	А	30A/m
Dips and Interruptions	IEC 61000-4-11	A A / B A B	DIP: =100%, 0.5 cycle DIP: =100%, 1 cycle <sup>(Note 2)</sup> DIP: =30%, 25 cycles INT: =100%, 5sec

Note:

1. Above specification is applied with output equal or below 30W. For higher output power, please re-confirm with us.

2. The test result of input 240Vac / 100Vac is criteria A / B.

# Safety Approvals Safety Agency Safety Standard Notes & Conditions TUV EN 60601-1: 2006+A11+A1+A12 Designed to meet (Medical 3.1<sup>rd</sup>) CB IEC 60601-1: 2005+CORR. 1: 2006+CORR. 2: 2007+A1: 2012 Approved. UL/cUL ANSI/AAMI ES60601-1, CAN/CSA-C22. 2 No. 60601-1 Approved.




#### **Mechanical Details**

#### Mechanical Specification

Parameter	Conditions/Description							
Dimension	76.2 (L) x	50.8 (W) x	26.1 (H) mm, Toler	rance +/- 0.5mm.				
Connector & Pin Assignment	Location	Pin	Assignment	Proposed Housing	Proposed Terminals			
	-	1	AC in (L)	2				
	CN1 (Input)	2	Empty	mates with JST VHR-3N or Equivalent.	mates with JST series SVH-21T-P1.1 crimp terminal or equivalent			
		3	AC in (N)					
	CN2	1	0V	mates with JST VHR-2N or	mates with JST series SVH-41T-P1.1			
	(Output)	2	+ V	Equivalent.	crimp terminal or equivalent			

Mechanical Drawing

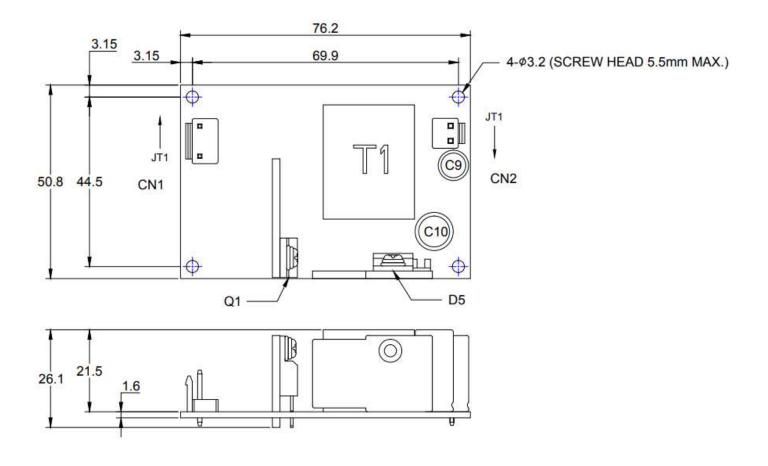





## 30W Medical AC / DC


#### Performance

(Input voltage: 115Vac)

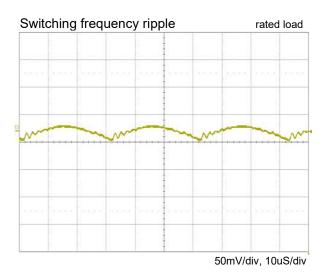


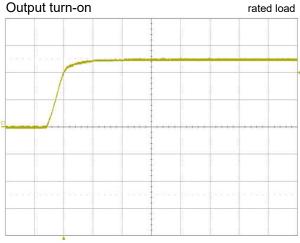





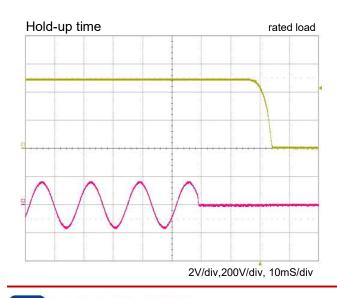

**MAGIC POWER** 

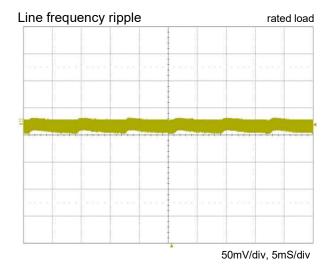


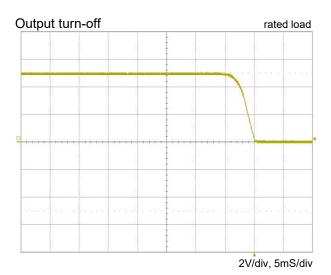

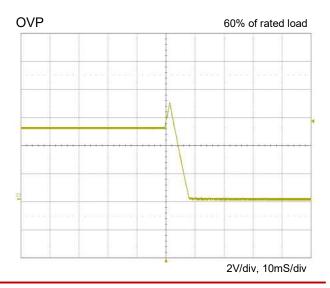



Page 8


## 30W Medical AC / DC

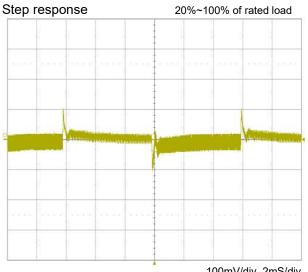

100mV/div, 2mS/div

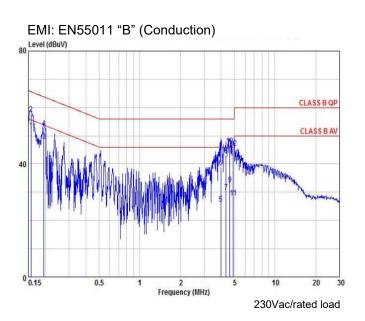

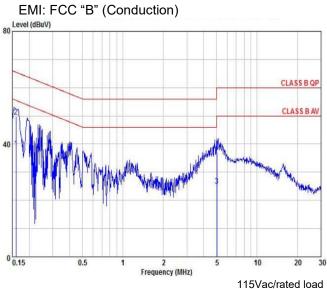

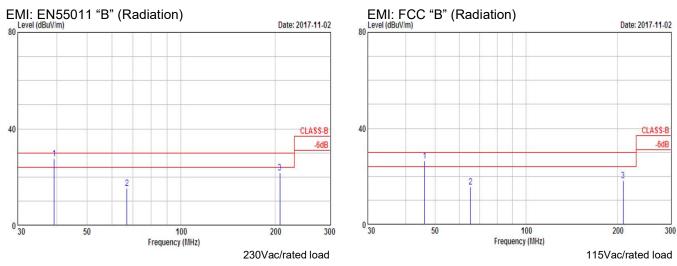



#### **Thermal Considerations**

In order to ensure safe operation of the SPS in the end-use equipment, the temperature of the components listed in the table below must not be exceeded.

Temperature should be monitored using J type thermocouples placed on the hottest part of the component (out of any direct air flow). See mechanical details for component locations.

Temperature measurements at monitored amb.				
Component	Monitored Temperature			
T1	110°C			
Q1	106°C			
D5	121°C			
C9	105°C			
C10	94°C			

